

APPLICATION

Replacement of Limit Shaft and/or its components for Medium Duty Logic Models MT, BMT, MH and MJ.

CARTON INVENTORY

ITEM	DESCRIPTION	QTY
1	MT Limit Shaft	1
2	Flange Bearing 3/8" I.D.	2
3	Limit Nut	2
4	Sprocket 48B9 x 3/8" Powder Metal	1
5	Shim Washer 3/8" I.D. x .010" THK.	5
6	Rollpin 1/8" x 1" Long BLK.	1
7	E-Ring 3/8"	1

INSTALLATION RECOMMENDATIONS

1. Close door and secure.
2. Disconnect power to the operator.
3. Remove the drive chain from the operator to the door.
4. Remove operator from its location.
5. Refer to the owner's manual provided with the operator for all mounting and wiring instructions.
6. Reset limits after the operator is reinstalled.
7. Reapply power to operator.
8. Test all safety equipment (if applicable) for proper functionality.



WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**, disconnect electric power to operator **BEFORE** installing.

